

# iSymphony™

## OPERATING INSTRUCTIONS

### 26" HD LCD Television LC26iH56



#### **AIR (TV)/CABLE MODE SELECTION**

The Air/CABLE menu option is set to the "CABLE" (Cable Television) mode at the factory. If you want to use an antenna for the built-in TV tuner, this menu option must be set to the "Air" mode. Please refer to "6. Channel MENU" in page 14 of this manual for the details.

# Contents

Safety and warnings..... 2-4

Introduction.....5

Installation..... 6-9

Remote Control.....10

Operation.....11-14

Trouble Shooting..... 15



Instruction For Wall Mount..... 16

Warranty Card..... 17

**IMPORTANT SAFETY INSTRUCTION**

1. Read these safety instructions.
2. Keep these safety instructions.
3. Heed all warnings.
4. Follow all safety instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators , stoves, or other apparatus (including amplifiers)that produce heat.
9. Protect the power cord from being walked on or pinched particularly at power outlets, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture , does not operate normally, or has been dropped.
13. Apparatus must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.



	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN!	
<b>CAUTION</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		




The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.




The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

**WARNING:**


To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

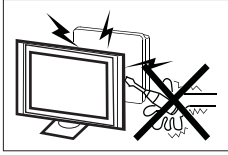


High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

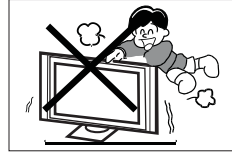

Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

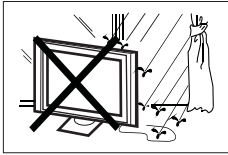


To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

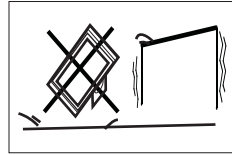

Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.




Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

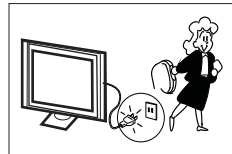


When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.




Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

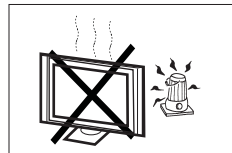

Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

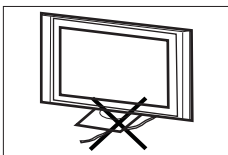

Do not trap the power supply cord under the television receiver.

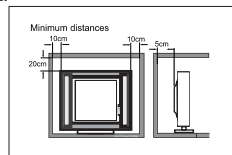

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

Thank you very much for purchasing this TV. To enjoy your product from the very beginning, read this manual carefully and keep it handy for easy reference.



### INSTALLATION

- Locate the TV in the room where light does not strike the screen directly.
- Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.
- Allow enough space between the TV and the wall to permit ventilation.
- Avoid extremely warm locations to prevent possible damage to the cabinet or premature component failure.
- This TV can be connected to AC 100-240 Volts. 50/60 Hz. Never connect to a DC supply or any other power supply.
- Do not cover the ventilation openings when using the TV.

### CAUTION

Never tamper with any components inside the TV, or any other adjustment controls not mentioned in this manual. All LCD- TVs are high voltage instruments. When you clean up dust or water drops on the LCD PANEL or CABINET, the power cord should be pulled out from the receptacle, then wipe the TV with a dry soft cloth. During thunder and lightning, unplug the power cord and antenna cord to prevent damage to your TV. All repairs to this TV should only be performed by qualified TV service personnel.

Earthing connection--- The apparatus shall be connected to MAINS socket outlet with a protective earthing connection. MAINS plug or appliance coupler of the apparatus is used as disconnect device, it should remain readily operable.

Warning: Change or modifications to this unit not expressly by the part responsible for compliance could void the user's authority to operate the Equipment.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Shield cables must be used with this unit to ensure compliance with the Class B FCC limits.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or cords.

## Main features

- 1366 x 768 native resolution for HD performance
- Integrated ATSC TV tuner for HDTV broadcast reception
- High brightness provides a vivid and brilliant picture
- Deeper blacks and brighter whites with high contrast
- Wide Screen aspect ratio (16:9) for a complete home theater experience
- HDMI input for true digital connection
- VGA port for connection to PC
- Built-in stereo speaker system
- Full-function Remote Control


## Accessories

AC Power Cord.....	1
Infrared Remote Control.....	1
User's Manual .....	1
Battery(AAA).....	2

## Main parameter


Viewing Picture Size(diagonal)	26 inch
Resolution:	1366x768
Aspect Ratio:	16:9
TV System:	ATSC Digital system and NTSC Analog system
Video Signal System:	NTSC/PAL/SECAM
Receiving Channel:	Cable :1-135/ Air: 2-69(ATV&DTV)
Power consumption:	130W
Input Power Voltage:	AC 100V-240V 50/60Hz
Audio Output Power(THD ≤ 7%):	2x3W
High-Definition Multimedia Interface(HDMI) Input	x 2
YCb(Pb)Cr(Pr) Input	x 1
Composte Video Input	x 2
Analog RGB(VGA) Input	x 1
Audio Input	x 3
<b>Horizontal definition(TV line)</b>	Composite Video Input ≥350 Video Input ≥400 YCb(Pb)Cr(Pr) ≥400

## Front panel

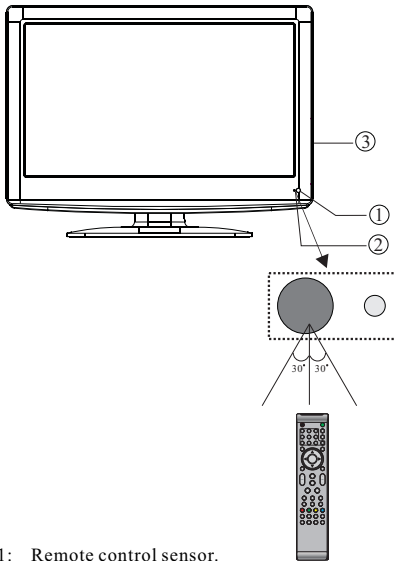


- 1: Remote control sensor.
- 2: Indicator LED: GREEN ● POWER ON.  
RED ● STANDBY.
- 3: Key board

## Side panel

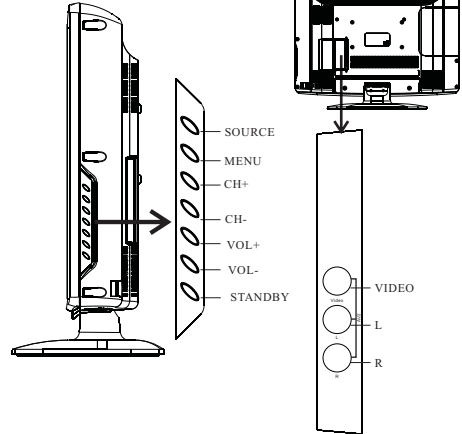

1. **SOURCE**: Display the input source menu.
2. **MENU**: Display main MENU.
3. **CH+/CH-**:In TV mode, press “CH+” or “CH-” to change the channel up and down.In MENU mode, press “CH+” or “CH-” to select items .In standby mode, press “CH+” or “CH-” to turn on the TV.
4. **VOL+/VOL-**:Adjust sound level.In MENU mode, press “VOL+” or “VOL-” to adjust the item that you selected.
5. **STANDBY** : Press this button to turn the unit ON from STANDBY mode. Press it again to turn the set back to STANDBY.
- 6.**VIDEO INPUT**
- 7.**AUDIO INPUT-L**
- 8.**AUDIO INPUT-R**

## REAR AV PASTER

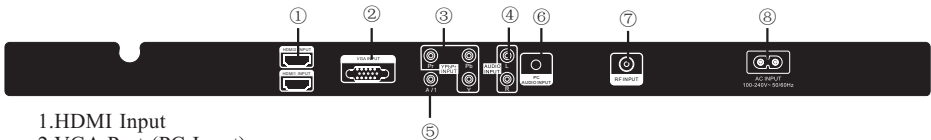

- 1.HDMI Input
- 2.VGA Port (PC Input)
- 3.Component Video (YPbPr) Input
- 4.Audio Input
- 5.Composite Video Input
- 6.PC Audio Input
- 7.Antenna Socket
- 8.AC Power Socket

Note: 1.Composite video input and component video input share the audio input.


- 2.When "DVI to HDMI cable" is used, the audio output for DVI needs to be connected to the PC Audio Input (above 7).

PC

STEPS:

Be sure both the TV and computer are set to Power off.

- 1.Connect VGA and audio cable.
  - 2.Connect the power cord.
  - 3.Power on the TV, switch to VGA mode.
  - 4.Power on the VGA.
- This sequence is very important.

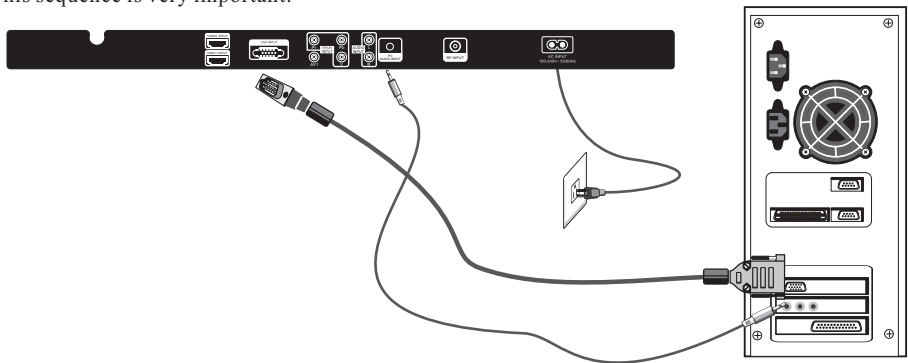


PRESET MODE

	RESOLUTION	V.Freq.(Hz)	H.Freq.(KHz)
1	720*400	70	31.47
2	640*480	60	31.47
3	640*480	75	37.50
4	800*600	60	37.88
5	800*600	75	46.88
6	1024*768	60	48.36
7	1024*768	70	56.48
8	1024*768	75	60.02
9	1280*1024	60	63.98
10	1280*1024	75	80.00



# ANTENNA

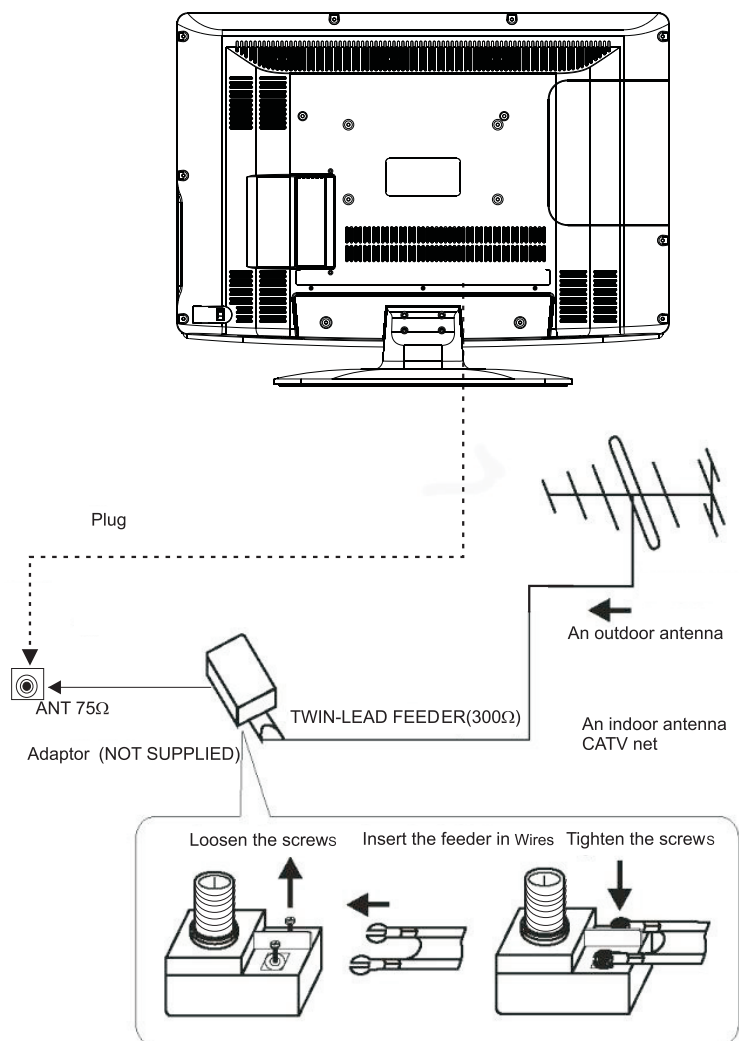


Note:  
 Aerial connections: IEC(female).  
 Input impedance: 75Ω unbalanced.

## AV EQUIPMENT


This TV provides one group of AV ,one group of YPbPr for convenient connection to VCR,DVD or other video equipment. Please refer to the owner's manual of the equipment to be connected as well.

You can use the input terminals on TV set rear as follows.

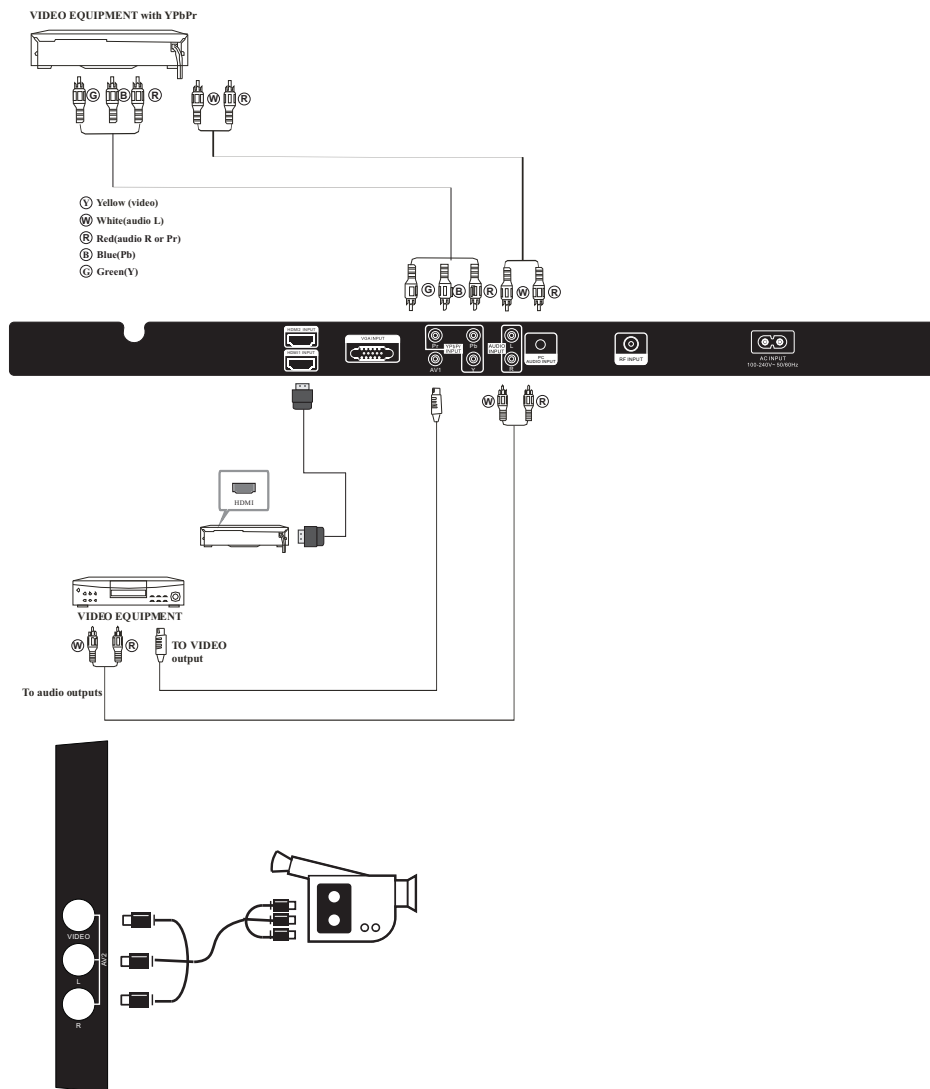


It can be connected to the following appliances: VCR, multi disc player, DVD, camcorder, video game or stereo system, etc.....

YPbPr can support these video formats:480i,576i,480p,576p,720p,1080i.

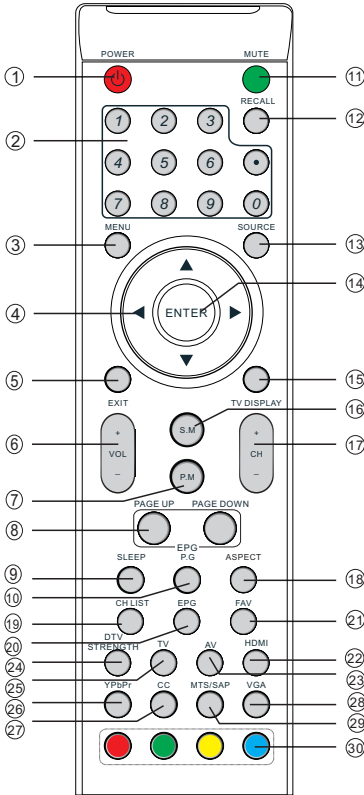

#### Insert Batteries Into the Remote Control

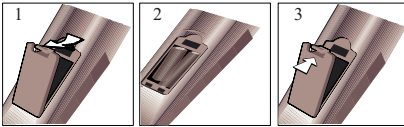

1. Remove the battery cover.
2. Inserting the 2 AAA 1.5V batteries making sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Mount the battery cover.  
Replace with new batteries when the TV set begins to show the following symptoms:  
Operation is unsteady or erratic. Sometimes the TV set does not function with Remote Control Unit.

#### Remark:

- 1) Alkaline Battery Recommended.
- 2) Remove batteries when they are exhausted or if the remote control is not to be used for long time.

- 1: **POWER**  
To set the TV standby or on.
- 2: **NUMBER KEY**  
For direct access to program.
- 3: **MENU**  
To display TV menu or to return to the previous menu.
- 4: **CURSOR**  
To move within the menu.
- 5: **EXIT**  
Used to exit menu.
- 6: **VOL +/-**  
To adjust sound level.
- 7: **P.M**  
To switch picture mode.
- 8: **PAGE DOWN/PAGE UP**  
In EPG mode, use this key to page up/down the EPG information.
- 9: **SLEEP**  
Set time to turn off the TV.
- 10: **P.G**  
Setting the Parental Control level control.
- 11: **MUTE**  
To disable or enable the sound.
- 12: **RECALL**  
To access the previously viewed program.
- 13: **SOURCE**  
To display or exit TV input source menu.
- 14: **ENTER**  
Confirms selection.
- 15: **TV DISPLAY**  
Displays/removes the program Information
- 16: **S.M**  
To switch sound mode.
- 17: **CH+/CH-**  
To access the next or previous Program.
- 18: **ASPECT**  
To change picture aspect.
- 19: **CH LIST**  
Used to display the channel list.
- 20: **EPG**  
Display all the information of DTV programs.
- 21: **FAV**  
Used to access your favourite channels in digital TV mode.
- 22: **HDMI**  
Hot key directly go to HDMI source.
- 23: **AV**  
Hot key directly go to AV source.
- 24: **DTV STRENGTH**  
Used to display the DTV signal strength menu.
- 25: **TV**  
Hot key directly go to TV source.
- 26: **YPbPr**  
Hot key directly go to YPbPr source.
- 27: **CC**  
Enable or disable the CC function.
- 28: **VGA**  
Hot key directly go to VGA source.
- 29: **MTS/SAP**  
Switch the sound stereo, SAP and mono.
- 30: **COLOR KEYS**  
Reserved keys

## 1. PICTURE MENU

The first item of the MENU is PICTURE MENU. You can adjust picture effect here, such as contrast, brightness, etc.

Press ▼▲ to select, press ◀▶ to adjust, press MENU to exit.




Note:

If you want to adjust contrast, brightness, color, and sharpness, the picture mode must return to “personal” status.

## 2.AUDIO menu

The second item of the MENU is AUDIO MENU. You can adjust sound here.

Press ▼▲ to select, press ◀▶ to adjust, press MENU to exit.

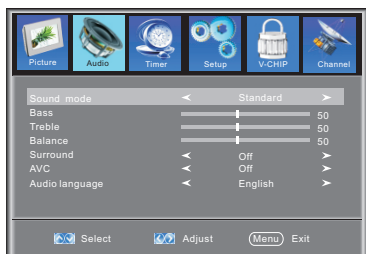


Note:

The item of Audio language is available in ATSC program.

## 3.TIMER MENU

The third item of the MENU is TIMER MENU. You can adjust time here.

Press ▼▲ to select, press ◀▶ to adjust, press MENU to exit.

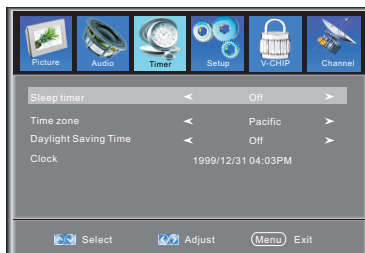

1).SLEEP TIMER: adjust this item, you can set the sleep timer.

Note:

The item of Time zone, the item of Daylight Saving Time and the item of clock are available in ATSC program

## 4. SETUP MENU

The forth item of the MENU is SETUP MENU.

You can setup system here.

Press ▼▲ to select, press ◀▶ to adjust, press MENU to exit.



Note:

Restore Default: Reset all the settings to default value.

1). Advanced: In PC Mode is available.


Press ▼▲ button to select Advanced, Press ► button, the screen will display as follow:



- (1).H-Pos:Adjust the horizontal position of the screen.
- (2).V-Pos:Adjust the vertical position of the screen.
- (3).Clock: Fine tune the screen width.
- (4).Phase: Fine tune the phase of the screen. Usually don't adjust this item.
- (5).Auto: Auto adjust to fit the screen.


2). Closed Caption: switch close caption mode.

Press ▼▲ button to select Closed Caption, Press ► button, the screen will display as follow:

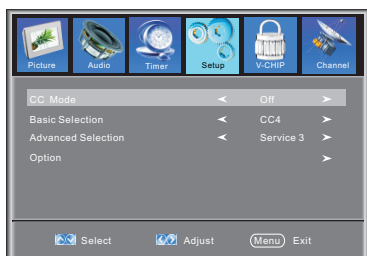

- (1):Advanced selection: only ATSC program is available.
- (2):Option:Used to edit CC font.

Press ► button, the screen will display as follow:

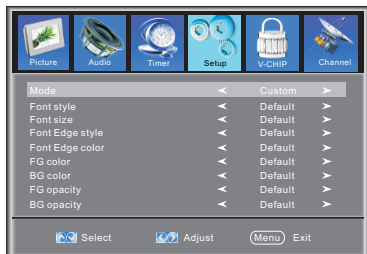

NOTE: Only ATSC program is available.

## 5. V-CHIP MENU

The fifth item of the MENU is V-CHIP MENU.


You can setup Parental Control here.

Press ▼▲ to select, press ◀▶ to adjust, press MENU to exit.

Parent control: input the password, it will go into Parental Control menu. Factory default password is 6666.



5.1.Input the correct password ,the screen will display as follow:

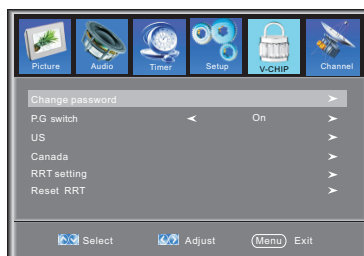

1). Change Password: Press ► button, the screen will display as follow:




- 1).New password: Input the new password
- 2).Confirm password: Input the new password again


## 5.2 V-CHIP switch:

When the Parental Control switch is ON, the below options can be adjusted.

5.3 US: Press ► button, the screen will display as follow:

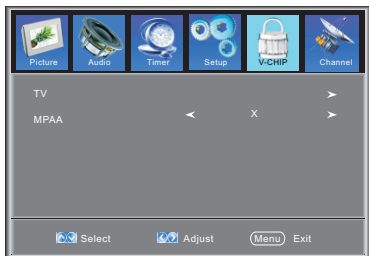

1):TV: Press ► button, the screen will display as follow:

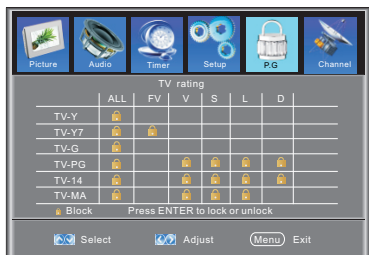


Rating	Content	Content				
		FV (Fantasy violence)	V (Violence)	S (Sexual situation)	L (Adult language)	D (Sexually suggestive dialog)
Suggested age	TV-Y (All children)					
	TV-Y7(Direct to order children)	X				
	TV-G(General audience)					
	TV-PG(Parental Guidance suggested)		X	X	X	X
	TV-14(Parents strongly cautioned)		X	X	X	X
	TV-MA(Mature audience only)		X	X	X	

And use ENTER key to switch lock/ unlock Parental Control feature.

2).MPAA:switch the movie-rating control level; N/A, G,PG, PG-13,R,NC-17,X.

Rating	Description
G	General audiences, All Ages admitted
PG	Parental Guidance suggested. Some material may not be Suitable for children.
PG-13	Parents strongly cautioned. Some material .may be Inappropriate for children under 13.
R	Restrict. Under 17 requires accompanying parent or adult guardian(age varies in some jurisdictions)
NC-17	No one 17 and under admitted.
X	X is an order rating that is unified with NC-17 but may be encoded in the data of order movies.

5.4 Canada: Press ► button, the screen will be displayed as follow:

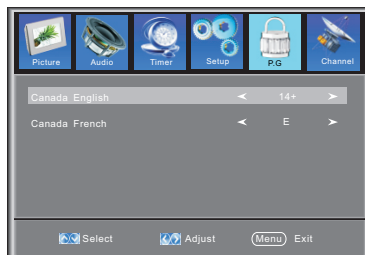

1): Canada English: switch the english rating control level:E,C,C8+,G,PG,14+,18+.

Rating	Description
E	Exempt: Includes news, sports, documents and other information programming: talk shows, music videos, and variety programming.
C	Children: Intended for younger children under the age of 8 years. Pays careful attention to themes that could threaten their sense of securityand well-being.
C8+	Children over 8 years old: Contains no portrayal of violence as the preferred, acceptable, or only way to resolve conflict; nor encourage children to imitate dangerous acts which they may see on the screen.
G	General: Considered acceptable for all age groups, Appropriate viewing for the entire family, contains very little violence, physical, verbal or emotional.
PG	Parental Guidance: Intended for a general audience, but may not be suitable for younger children (under the age of 8) because it could contain controversial themes or issues.
14+	Over 14 Years: Could contain themes where violence is one of the dominant elements of the storyline But it must be integral to the development of plot or character. Language usage could be profane and nudity , present within the context of theme.
18+	Adults: Intended for viewers 18 years and older and might contain depictions of violence, which while related to the development of plot, character or themes, are intended for adult viewing. Could contain graphic language and portrayals of secretary and nudity.

- 2).Canada French: switch the French-rating control level: E, G,8ANS+,13 ANS+,16ANS+,18ANS+.


Rating	Description
E	Exempt programming
G	General :All ages and children, contains minimal direct violence, but may be integrated into the plot in a humorous or unrealistic manner .
8ans+	General but inadvisable for young children :May be viewed by a wide public audience, but could contain scenes disturbing to children under 8 who cannot distinguish between imaginary and real situations. Recommended for viewing with paren.
13ans+	Over 13 years: Could contain scenes of frequent violent scenes and in tense violence.
16ans+	Over 16 years: Could contain frequent violent scenes and violence.
18ans+	Over 18 years: Only for adult viewing. Could contain frequent violent scenes and extreme violence.

5.5 RRT setting: in ATSC digital TV mode, it could be adjusted


5.6 Reset RRT: Press ► button, the screen will be displayed as follow:



- 1). Air/Cable: select Air TV signal and cable TV signal.
- 2). Auto Scan: If it's the first time you use the TV, you should scan all the TV channels first, press the ► button to confirm, you will see below menu :

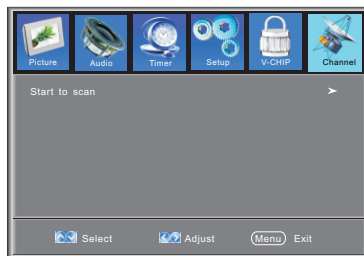


- A: Start to scan: press the ► button to confirm, you will see below menu which indicates auto search is in process.

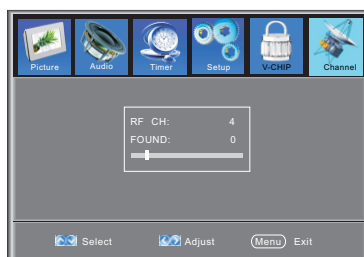





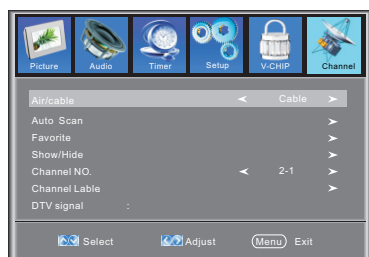











## 6. Channel MENU

The sixth item of the MENU is Channel MENU. You can adjust digital and analogue TV Channel . Press ▼▲ to move, press ◀▶ to adjust here.



 - 3). Favorite: Press ◀▶ button to choose/delete the favorite channel .
- 4). Show/Hide: Press ◀▶ button to display or hide currently channel.
- 5). Channel NO. :Display the currently channel number.
- 6). Channel label: Press ▲▼button to edit currently channel name.
- 7). DTV signal: Display DTV signal intension. It can't be selected and adjusted.

## Trouble shooting

Trouble phenomenon Symptom		Inspection Check
Picture	Audio	
 Snow	 Noise	antenna position, direction or connection
 Ghost	 Normal audio	antenna position, direction or connection
 Interference	 Noise	electronic equipment, car/ motorcycle, fluorescent light
 Normal Picture	 Mute	Volume (check if mute is activated or if the audio system connections are not correct)
 No picture	 Mute	Power cord is not inserted Power switch is not opened Contrast and brightness/volume setup Press standby key on the remote control for inspecting
 No colour	 Normal audio	Colour control
 Picture breaking up	 Normal audio or weak	retune channel
 No colour	 Noise	TV system


The LCDTV panel is built with very high precision technology giving you fine picture details in vibrant color. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue, black or white. Please note this does not affect the performance of the product.



## **INSTRUCTION FOR WALL MOUNT**

The wall mount kit (not included) with your purchase allows you to mount your iSymphony TV on the wall. For detailed information on installing the wall mount, refer to the instructions provided by the wall mount manufacturer. It is strongly recommended to contact a technician for professional assistance for wall mount installation. iSymphony is not responsible for any damage to the product or injury to yourself or others resulting from the wall-mounting.

VESA Dimensions for Wall Mount

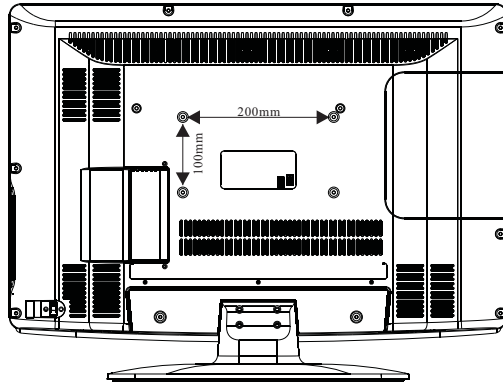

·This iSymphony TV is compliant with the VESA Standard mounting hole pattern 200mm x 100mm.

·4 pcs of type M4 screws are required for installing the wall mount bracket to your iSymphony TV. The depth of the threaded mounting holes on your iSymphony TV is 5.5 mm. Therefore, please use M4 screws of which length is 4 mm ~ 5 mm plus the thickness of the wall mount bracket.

Do not fasten the screws too tight for this may damage the TV or cause the TV to fall, resulting in personal injury. iSymphony is not liable for these kinds of incidents.

Do not mount your iSymphony TV at more than a 15 degree tilt.

Always use two people to mount the TV to a wall.

Do not install your Wall Mount Kit while your TV is turned on. It may result in personal injury due to electric shock.

# iSymphony™ LIMITED WARRANTY

## FLAT PANEL TELEVISION

This iSymphony brand Product, as supplied and distributed by iSymphony and delivered new in the original carton to the original purchaser is warranted by iSymphony against manufacturing defects in materials and workmanship for a limited warranty period of one (1) year on parts and labor. However, there will be only a 90 day parts and labor limited warranty for commercial use.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, no fault found or damaged at time of delivery to iSymphony.

Proof of purchase within one year from date of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase, and is valid only on Products purchased through iSymphony authorized dealers and used in the United States, Canada, and Puerto Rico by the original purchaser. To receive warranty service, the purchaser must contact iSymphony for problem determination and service procedures. Warranty service may only be performed by a duly authorized service center. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase to iSymphony or iSymphony's authorized service center.

iSymphony will repair or if repairs cannot be made, iSymphony will replace this Product at no charge with the same, like or similar Product if the Product is defective as specified in this limited warranty during the limited warranty period. iSymphony may use new or remanufactured parts or products to repair or replace the Product at its sole discretion. All replaced parts and Products become the property of iSymphony and must be returned to iSymphony. Replacement parts and Products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight needs to be prepaid by original purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. iSymphony shall not be responsible for or obligated to replace damaged goods. iSymphony will cover the transportation costs for the return of the repaired or exchanged product to the original purchaser

If the product is received damaged by iSymphony, it is the responsibility of the consumer to file a claim against the carrier. iSymphony will only store the damaged product for 30 days and reserves the right, in its sole discretion, to dispose of the damaged product or ship it back to the consumer at consumer's expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by iSymphony which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. iSymphony does not warrant uninterrupted or error-free operation of the product.

**THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON iSymphony REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. iSymphony SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.**

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service, please contact iSymphony at:

**Phone: 1-800-710-7740**

**[www.isymphonyproducts.com](http://www.isymphonyproducts.com)**

